

A-Series repair parts

Unit Model	A40	A60	A80	A120
Cover with labels	9-0262	9-0263	9-0264	9-0265
Base panel	9-0118	9-0118	9-0186	9-0186
front panel	9-0267	9-0268	9-0269	9-0270
rear panel	9-0266	9-0266	9-0266	9-0266
output current control knob	9-8527	9-8527	9-8527	9-8527
toggle on off switch	9-0109	9-0109	9-0109	9-0109
work cable	9-0184	9-0184	9-0189	9-0189
Main PCB assy	9-0108	9-0125	9-0108	9-0125
Main 40A PCB assy	NA	NA	9-0194	9-0194
Logic PCB	9-0107	9-0107	9-0107	9-0107
Center Chassis	9-0102	9-0102	9-0190	9-0190
Fan	9-0104	9-0104	9-0232	9-0232
Transformer, main	9-0106	9-0199	9-106	9-0199
Transformer, 60 amp main	NA	NA	9-0196	9-0196
Inductor, Output	9-0105	9-0105	9-0105	9-0105
Inductor, 50 Amp Output	NA	NA	9-0195	9-0195
Power cable strain relieve	9-0111	9-0111	9-0111	9-0111
Input power cable	9-0218	9-0218	9-0216	9-0217
Contact 4 pole	9-8587	9-8587	9-8587	9-8587
solenoid 12V	9-0114	9-0114	9-0114	9-0114
spare parts box	7-3267	7-3267	7-3267	7-3267
spare parts box cover	7-3266	7-3266	7-3266	7-3266
console quick disconnect	9-0161	9-0161	9-0161	9-0161
regulator with knob	9-0115	9-0115	9-0115	9-0115
Cap PCB	9-0167	9-0126	9-0192	9-0192
Filter, auto drain	9-0116	9-0116	9-0116	9-0116
RCA Cable	NA	NA	9-0212	9-0212
Mounting Foot	9-9386	9-9386	9-0271	9-0271
CNC Harness	9-9385	9-9385	9-9385	9-9385
Automation Interface Kit, Option	9-8311	9-8311	9-8311	9-8311
Automation Interface PCB, Option	9-9388	9-9388	9-9388	9-9388